

LUBRICANTS AND SERVICING SCHEDULE: STONE CRUSHER

Nomenclature	Daily	Every 50 Hrs	Every 100 Hrs	Every 250 Hrs	Every 500 Hrs	Every 1000 Hrs
Engine	Check Oil level in sump and if less replenish 2. Tighten all nuts, Bolts and other electric connections. 3. Check for any leakage.	-	-	Change engine oil	Clean strainer in sump & remove sludge from sump	Examine valve springs and tappets
Oil Pump	Check oil pressure while running	-	-	-	-	-
Air Cleaner	Examine air cleaner. Clean wire mesh and top up oil if necessary	Change oil	-	-	Remove and wash air cleaner element	-
Cooling System	Check water level in radiator & refill, check for any leakage.	1. Adjust fan belt 2. Grease Waterpump	-	Change water clean	Wash radiator with soda	-
Battery dynamo and self starter	See that battery terminals & electrical leads are cleaner	Top up battery with distilled water	-	Lubricate dynamo	-	Inspect commutator & brusher in dynamo
FIP & Injectors.	-	-	Check oil level in FIP assy and refill	-	Change oil in FIP. Clean & Check injector. This has to be done by Fd Wksp	-
Oil Filters	-	-	-	Change element in cating of filter	-	-

Fuel Filter & Fuel Tank	-	-	Clean primary fuel filter	Change felt element (primary) of dual fuel filter	-	Clean Fuel Tank 2. Knew element of fuel filter
Jaws & Boarings	Grease Jaw Stock bearings side bearing every hour	Check for wear of jaws, plates & replace if necessary. Clean all boarings & repack with grease.	-	-	-	-
Nuts & Bolts	Check all nuts & bolts and tighten.	-	-	-	-	-
Turn table	-	-	-	Cubricate with grease	-	-
Wheel Hub	-	-	-	-	Lubricants with grease	-
Toggic plate bearings	Lubricants with grease	-	-	-	-	-
Draw back springs	-	-	Check tension	-	-	-
Transmission belts	Check transmission	-	-	-	-	-